



The Rental Place

Cotton Candy Machine Instructions

Trouble Free Operation

1. Plug in machine and turn main power and motor switch to “on”
2. ALWAYS add sugar when motor is running
3. Fill 90% full whenever you add sugar
4. DO NOT TOUCH HEAT SWITCH. This knob has been removed and set at the designated temperature.
5. Machine must be used indoors.
6. Machine must be plugged in directly to outlet.
7. For best results do not plug in with other electric items.

Cotton Candy Making Procedures

1. Attach webbed mesh to the inside of the bowl with the clups provided.
Or, moisten the inside of the floss pan with a clean, damp cloth so floss will adhere to the pan.
2. Note the direction of the floss as it is spun off the floss head.
3. Adjust floaters (on top of the spinner head) up for more lift and down for less lift.
4. Hold the cone at the pointed end between two fingers and thumb.

